 


Franking



Switch on
or
activate from the sleep mode
with the **C** key.




Set the franking imprint:
– Postage value
– Type of mail endorsement
– Slogan imprint.

Check the date.



Set the account.

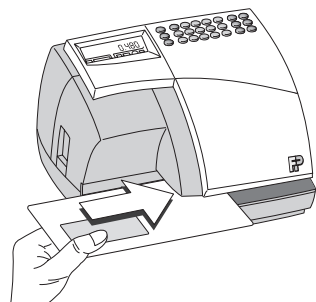


Position the letter...

...the optimail prints the
stamp and ejects the
franked letter to the right.

Load postage – TELESET



 Make sure that
– the optimail is connected to
the telephone line
– the scales function is switched
off.



Type the 8-digit PIN (Personal
Identification Number).

Confirm with the **CO** key.



The amount in \$ used for the last
postage loading (1,000.- \$ in the
example) appears in the display.

Keep preset amount...


Confirm the preset amount
with the **R** key.



Establish connection...
Data exchange...
New postage loaded.

Change amount...

Type the desired amount
(even 10-\$ amount).

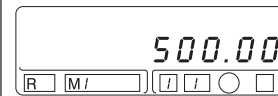


Confirm with the **R** key.



Within 30 seconds
confirm with the **R** key.
New postage loaded.

Quick Reference Guide optimail

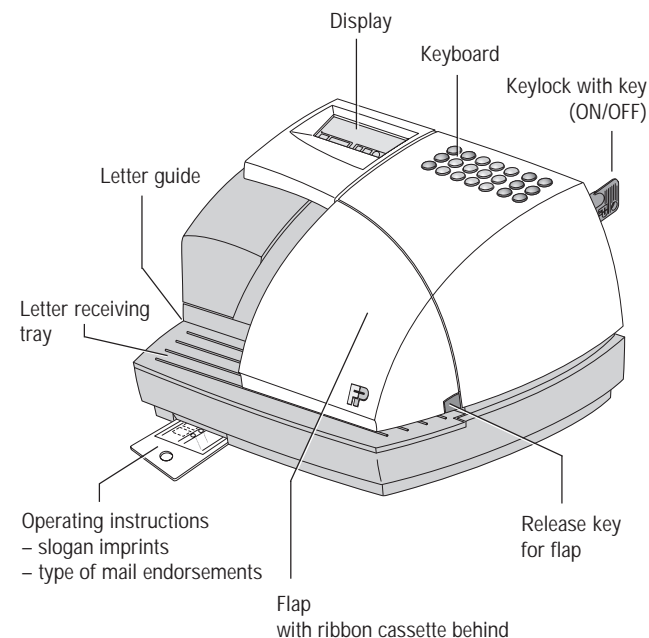

What you need to know...


This quick reference is exclusively for users who have
already had experience of handling the optimail franking
machine.

The quick reference contains a selection of the most
frequently used functions. You will find a full detailed
description of all the functions in the Operator Manual.

Also read the Operator manual for important hints on

- use for the intended purpose
- safe handling of the optimail
- printing the incoming mail stamp
- installation and commissioning
- maintenance care and service
- remedies for faults.

Setting the franking imprint

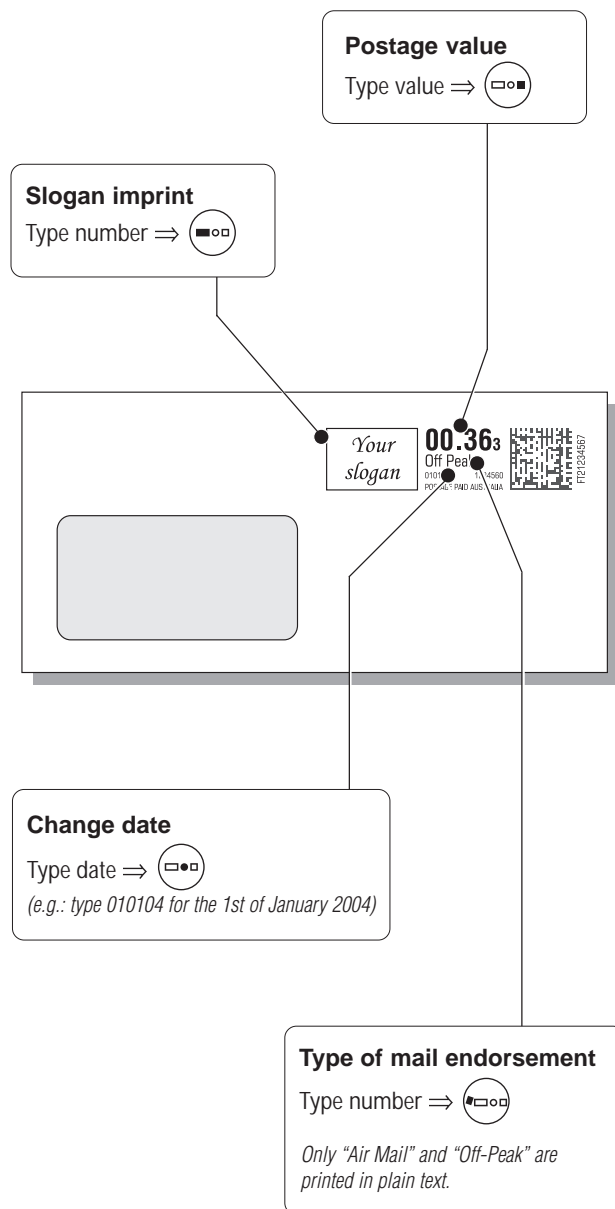

Display and keyboard

